

Technical Data

Voltage : 5V DC
Rated power : 3 W



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

Fine Elements® is a registered trade mark of Europasonic (UK) Ltd




Europasonic (UK) Ltd
Manchester M3 1JS

www.europasonic.com

Fine elements®

Model COL1037

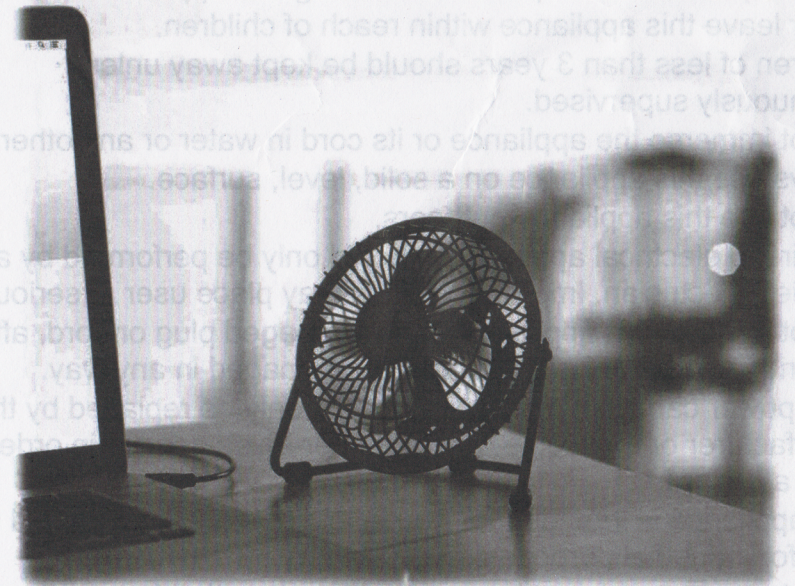

Product may differ slightly from image shown

scanned by tinkersblog.net

4 Inch Black USB Fan


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference:

- Read and familiarise yourself with all operating instructions before using this USB Fan.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- Children of less than 3 years should be kept away unless continuously supervised.
- Do not immerse the appliance or its cord in water or any other liquids.
- Always use this appliance on a solid, level, surface.
- Do not use this appliance outdoors.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects (including fingers) into the fan grill or any openings as this could risk injury or damage to the appliance.
- Never carry the fan by the cord or pull the cord from the USB socket, grasp the plug to unplug it not the cord.

Description of parts

- 1 Pivoting Fan Head
- 2 Protective Blade Guard
- 3 Fan Blade
- 4 Stand with Feet
- 5 On/Off Switch
- 6 Power Cord and USB Plug

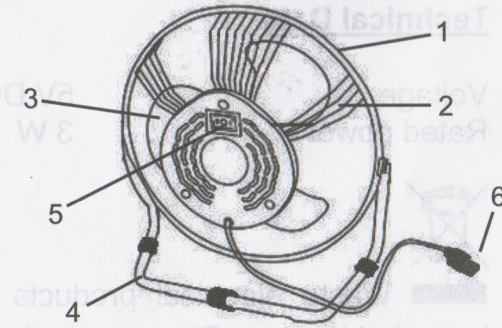

Using Your USB fan

- Place the fan into the desired position ensure that it is level.
- Ensure that the on/off switch (5) in the '0' position to ensure the fan is in the off mode.
- To alter the vertical tilt position, hold the stand (4) and simply move the fan head (1) to the desired position.
- Insert the USB plug (6) into the nearest USB socket; press the on/off switch (5) to operate the fan. Return the switch to the 0 position to switch the fan off.

Care and Use of your Fan

- Ensure that the fan is not connected to the USB supply before cleaning.
- Wipe the fan clean with a clean, soft damp cloth.
- Do not immerse the fan or its cord in water or any other liquid.