 
 
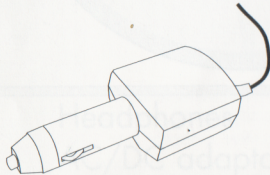 


HITACHI

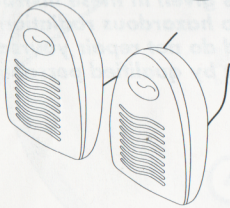

PERSONAL CD PLAYER

model
DAP
771

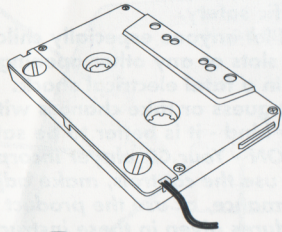

Safety Precautions

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturers instructions.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DON'T remove any fixed covers as this may expose dangerous voltages.

DON'T obstruct the ventilation openings of the equipment with items such as newspapers, tablecloths, curtains, etc. Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on the equipment.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment.

High temperatures can melt plastic and lead to fires.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety.

NEVER let anyone especially children push anything into holes, slots or any other opening in the case - this could result in a fatal electrical shock.

NEVER guess or take chances with electrical equipment of any kind - it is better to be safe than sorry!


CAUTION - *Your CD player incorporates a laser.*

If you use the controls, make adjustments, alter performance, or use the product differently from the procedures given in these instructions you may be exposed to hazardous radiation. Do not open any covers and do not repair yourself. Repair work must be carried out by qualified personnel.



Know your personal CD player

Please read these instructions before using your CD player.

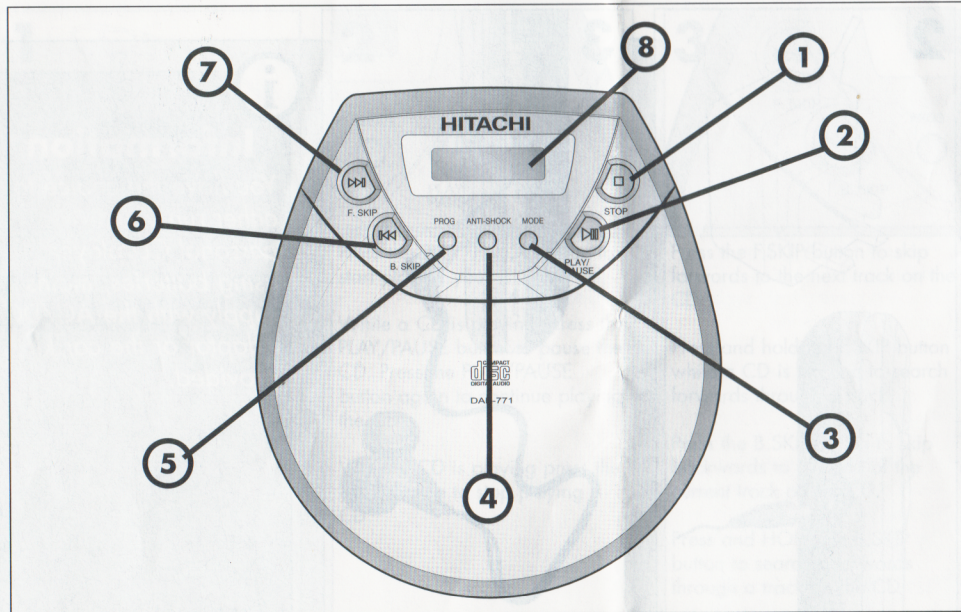

i **Information**

1. Stop button
2. Play/pause button
3. Mode button
4. Anti-Shock button
5. Program button
6. Back skip/search button
7. Forward skip/search button
8. Display


Accessories:

- Headphones
- AC/DC adaptor
- Speakers
- CD to cassette adaptor
- Cigarette lighter adaptor




Using your personal CD player

1

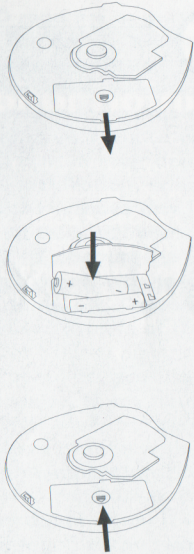


Insert two AA size batteries (not supplied) into the battery compartment as shown above.

2

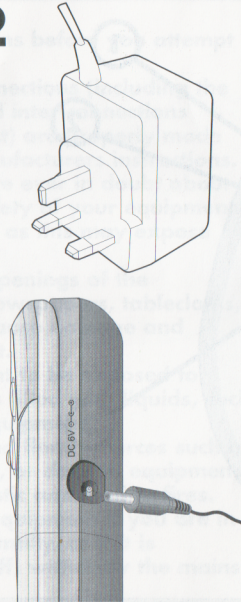

Plug the AC/DC adaptor or cigarette lighter adaptor into the DC IN socket on your personal CD player.

3

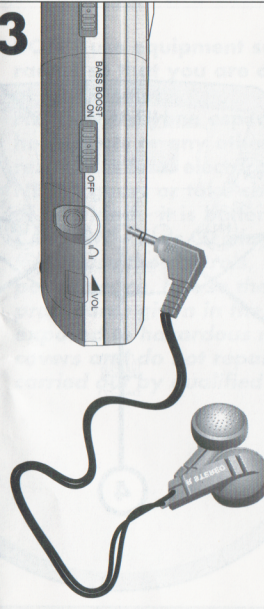

Plug your headphones, speakers or CD to cassette adaptor into the PHONES socket on the side of your personal CD player to listen to music.




Information

You have the choice to either run your personal CD player using batteries, mains supply with the AC/DC adaptor or the car kit provided.




Using the different features

Using different features after inserting a CD as shown previously.

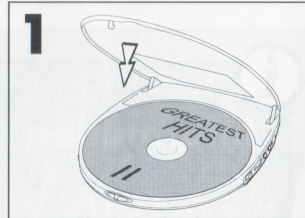


1 Slide the OPEN switch across and insert a CD (label side up) into the CD compartment. Close the CD compartment.

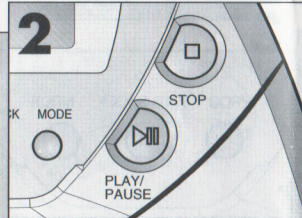

2 Press the PLAY/PAUSE button to start playing your CD.

While a CD is playing, press the PLAY/PAUSE button to pause the CD. Press the PLAY/PAUSE button again to continue playing the CD.

When a CD is playing press the STOP button to stop playing a CD.

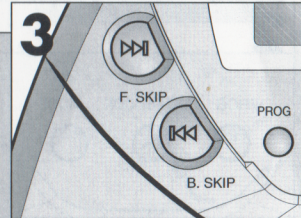

3 Press the F.SKIP button to skip forwards to the next track on the CD.

Press and hold the F.SKIP button while a CD is playing to search forwards through a track.

Press the B.SKIP button to skip backwards to the start of the current track on the CD.

Press and HOLD the B.SKIP button to search backwards through a track on the CD.




Information

If the buttons on your CD player do not work, check that the HOLD switch is not set to on. The HOLD switch can also be used as a travel lock.




Using the different features

.....
Play a CD and then press the STOP button before using the PROGRAM and INTRO features.
.....

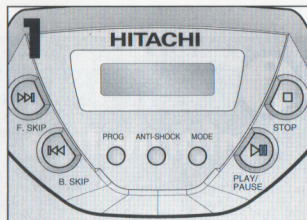

You can use the program feature to play a selection of tracks from one CD.

Press the PROG button.
Press the F.SKIP or B.SKIP buttons to select your first track to be programmed in.
Press the PROG button again to confirm your choice.
Repeat selecting tracks and confirming your choice up to a total of 24.
You can check your selection by repeatedly pressing the PROG button.
Press PLAY to play your choice.

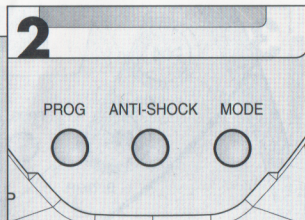

Press the MODE button once while you are playing a CD. This will continuously repeat the track that is playing.

Press the MODE button twice. This will continuously play all of the tracks on your CD.

Press the MODE button three times. This will play a ten second intro of every track on the CD.

Press the MODE button four times. This will play the tracks on your CD in a random order.



To switch the anti-shock feature off press the ANTI-SHOCK button.



Information


Slide the BASS BOOST switch to ON to increase the bass sound.



Using your car kit


You can connect your personal CD player to your car stereo

1

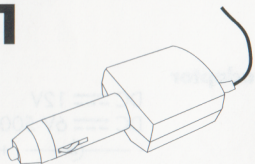


Connect the cigarette lighter adaptor to the DC 6V socket on your personal CD player.

2

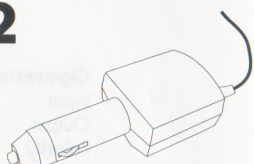


Connect the cigarette lighter adaptor to your cars cigarette lighter.

3

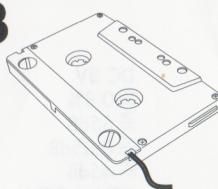

Connect the CD to cassette adaptor to the phones socket on your personal CD player.

4

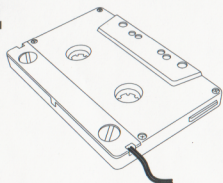

Insert the cassette into your car stereo, just as you would with a normal cassette. When you now play a CD the music will come out of your cars speakers. The volume control should be set to a suitable level and the BASS BOOST switched off.



Information

The wire from your CD to cassette adaptor may need adjusting depending on the type of car stereo you have. Remove the two screws re-position the wire and then replace the screws.



Specifications

.....
Remove any stickers or protective foil and unroll mains lead.

Specifications:

Operating Voltage	DC 3V
THD	≡ 0.8%
S/N ratio (no filter)	≡ 55dB
Channel balance	≡ 0.05dB
Channel separation (no filter)	≡ 45dB
Frequency response	20Hz - 20KHz

AC/DC adaptor information:

Input	AC 230V 50Hz
Output	DC 6V 300mA
Polarity	-  +

Batteries (not supplied):

2 x AA 1.5V

Speakers:

L x W x H	70mm x 50mm x 90mm
Load impedance	2 x 16 ohms
Power	2 x 15mW

We continually strive to improve our products, specifications may change without prior notice.

Cigarette lighter adaptor

Input	DC  12V
Output	DC  6V 500mA
Polarity	-  +